


## USB Charging Instructions

Pull the USB dust cover out of the mic and rotate it clear of the socket.  
Plug the micro-USB power supply into the socket.

Do not store batteries in an unused device for extended periods of time.

LED Action:	Charger/Battery Status:
Red	DANGER: Battery is reversed. Remove & replace battery correctly.
Solid Green	Battery is charging. (Note: may dim slightly once per second)
2-Second flash Green	Battery is fully charged.
Fast flicker Green	No battery detected.
No LED	A) No power (check power supply) B) Charger overheated (check proper battery, and ensure the device is not in a warm location) C) Power Supply too weak (get a stronger power supply; 550mA minimum)

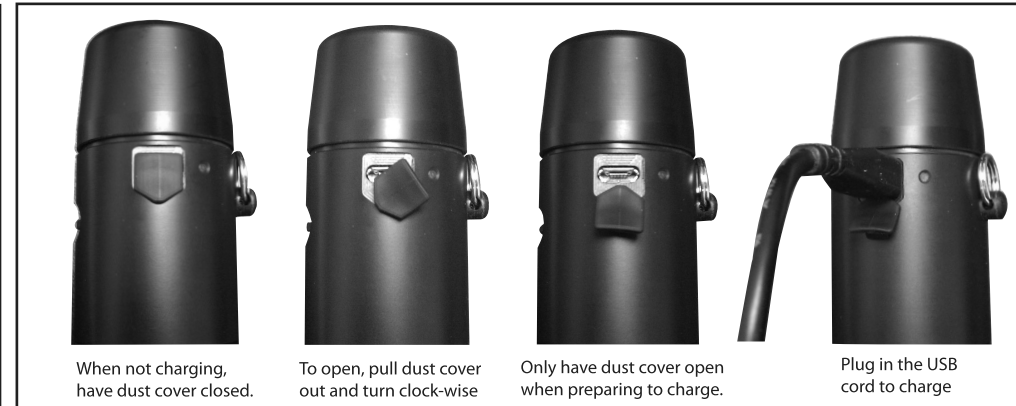

### Warning

Do NOT charge Alkaline or other non-rechargeable batteries with the charger. Do NOT charge Lithium batteries of any type. Doing so will void the warranty, and may cause fire and/or explosion.

Only charge NiCAD or NiMH 9v style batteries. Charging any other type of battery may cause damage and void the warranty.

Permanently removing the Micro-USB dust cover will void the warranty on the Micro-USB socket. The warranty does not cover cleaning or damage to the Micro-USB socket caused by lint, soil, or other contaminants.

Only charge in a "room temperature" location (~70-80°F, or 20-25°C). Do not charge in a warm or hot location. (i.e. a car on a sunny day, above a heater or other electronic equipment.) Charging in a hot location may cause the charger to turn off.